




### **It Can't Be Any Simpler**

The internal valve controller can handle any dispensing technologies from simple syringes / cartridges, gear pumps, progressive cavity pumps, 2 part meter/mix systems, etc. Up to 32 devices can be controlled including vision guided options.

### **Import CAD Files for Motion Paths**

Create dispense patterns from DXF, PLT, or other vector files or use the built-in advanced Jog & Teach functions.

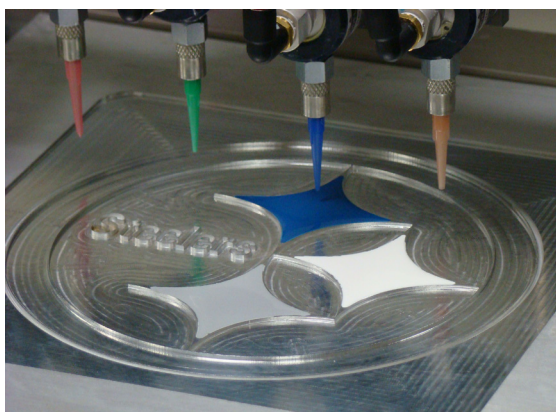

## **RC Series Conveyor with Integrated XYZ Gantry**

The RC Series features a tightly integrated XYZ robotic gantry system into the machine framework that contains a slip roller conveyor system with quick adjust rails to accommodate products of varying lengths and widths.

- Single machine base for conveyor and XYZ gantry
- One tightly integrated control system for both
- 16 extra inputs / outputs (expandable to 56 I/O)
- Slip roller conveyor; Rugged chain drive (no belts)
- Available several roller material designs and qty's
- Multiple conveyor stops with detects, sensors & logic
- Brushless digital servo motors in all 3 robot axes
- Preloaded drives with ball slides in each axis
- Gantry travel covers conveyor length & width
- Modular design allows limitless customizing

### **Streamline Your Production**

The clever in line design can help to streamline your production flow when processing pallets, sheets, glass, mats, molds, etc.

***The RC Series is modular and available in different sizes and configurations***

