





Teach Cam

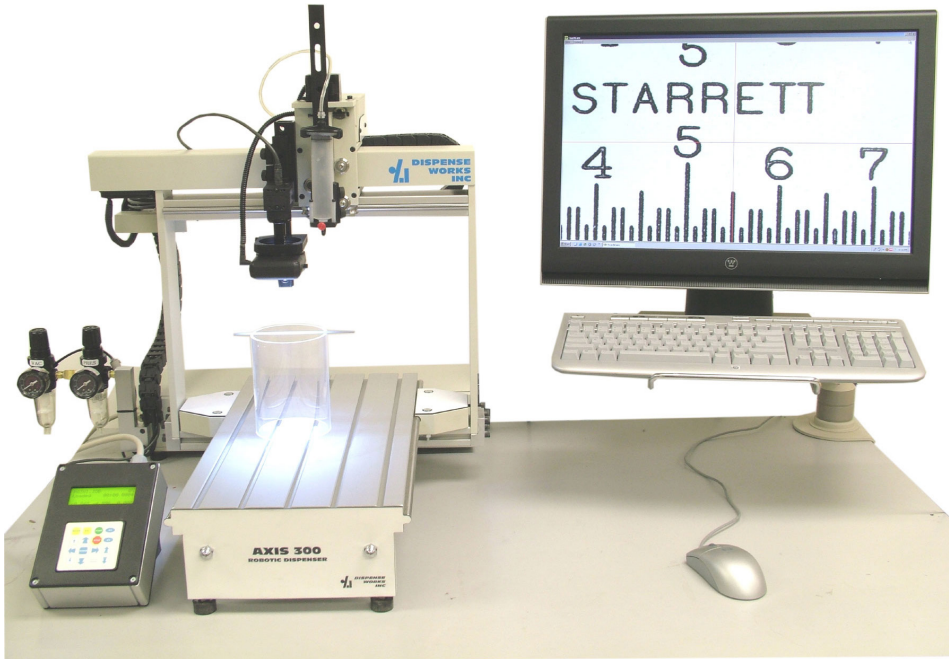

The Axis 300 is available with an integrated camera / light system that greatly simplifies the jog & teach feature for programming.

This option is available with most of the Dispense Works robots.

In addition to the above, a measurement tool is included to use the system as a coordinate measuring machine.

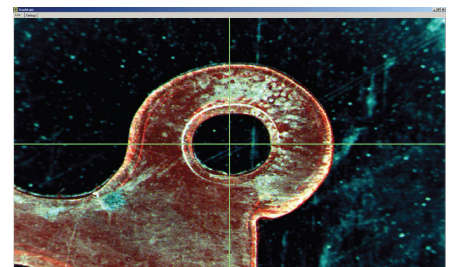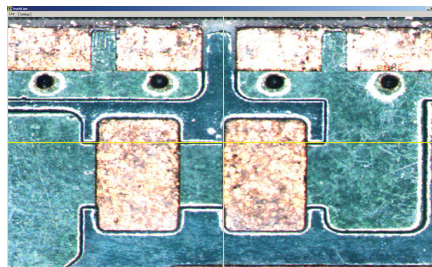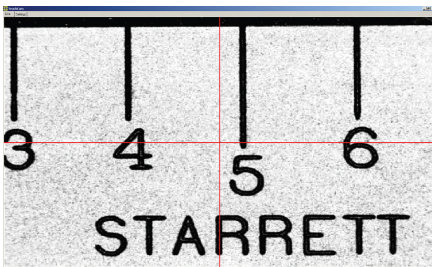

Intuitive Setup Screen

An intuitive setup screen allows the user to enter the X & Y offset from tip to camera center, for seamless automatic operation.

A full camera control dialog screen with required properties to set brightness, contrast, capture, etc. is included in the software.

Preferences for crosshair color and thickness are included as well.

