


RC Dispenser / Dual Conveyor

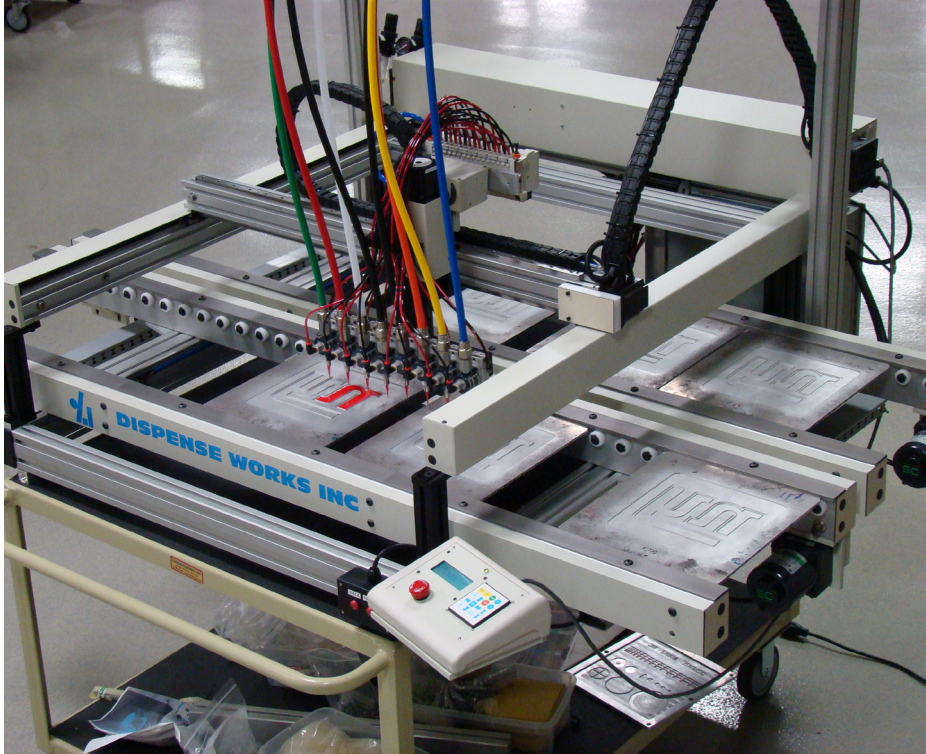

This system features dual RC model (slip roller) conveyors with quick adjust rails to accommodate pallets of different sizes.

Each conveyor may be set to run a different fill file if running sets.

The MG robot is attached to the framework and provides all controls and logic for full automatic production.

All mechanism and controls are mounted over head for easy access to the tooling / conveyor.

Up to 16 heads may be controlled by the software. Each has a precision slide to retract when not in use.

Pre-Programmed System

Dispensing eight different colors of vinyl (Plastisol) into aluminum molds. Images taken from graphic or cad type programs.

Software function allows fluid volume adjustment and automatic valve selection.

It Can't Be Any Simpler

Images may be directly imported and set up in the software, or taught with the advanced Jog & Teach function, that draws the patterns while you teach. Any file may be modified with a few mouse clicks.

