


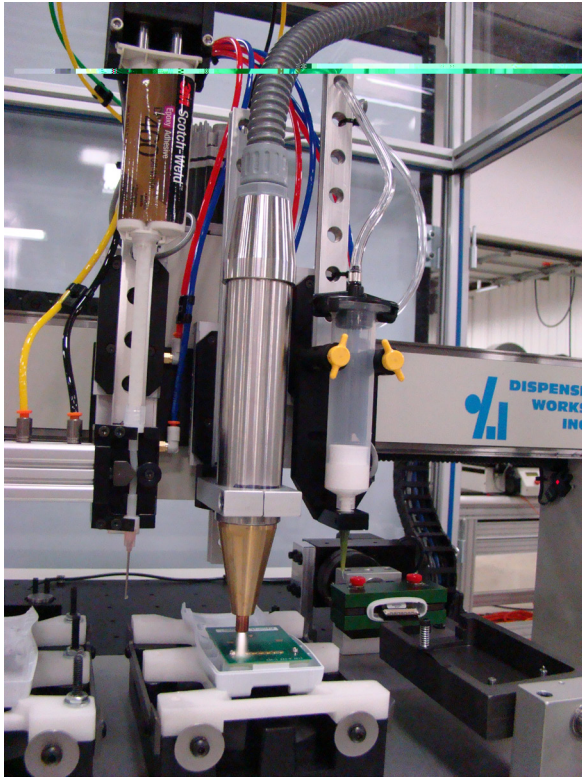


### ***Today's First Choice***

The RP 2415 robot was chosen as the ideal platform.

The large and stable ground, thick (24" x 24") base plate, with pre-tapped holes provides the ideal foundation for rigid mounting of your fixturing and tooling.

Your parts remain stationary, only the precision overhead gantry moves in the X – Y – Z axes.

***Available with complete guard / enclosure package.***

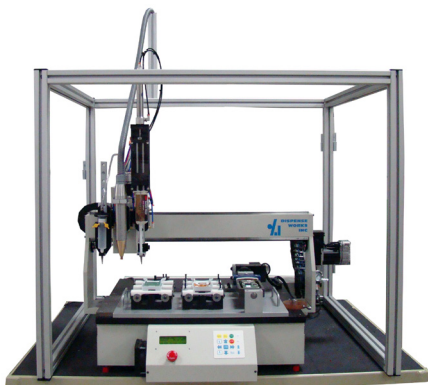

## **Plasma Treat with RTV & Epoxy Dispensing**

Automates the entire process:

- Plasma treats family of 3 plastic parts
- 4th Axis base fixture rotates part during operation
- Applies 2 part epoxy direct from 50ml cartridge
- Applies RTV from a 30cc syringe
- Quick release fixturing for changeover
- Direct control interface to plasma system
- Records production data
- Network (LAN) connectivity

Dispensing and plasma patterns may be taught with the machine, typed in or imported from a CAD file.

