



RD 1250 Large Format Fluid Dispenser

Simply the best modular dispensing table available. It combines a smart work bench to a built in precision overhead servo XYZ gantry system.

Mechanisms are neatly tucked in and do not add to the width of the base. This provides easy access from front, sides and top requiring less operator "reach" to the center of the table.

Many Smart Design Features

The T Slot table base featuring 25 Full length slots provides more than ample fixturing possibilities for most applications.

Under this table surface, the robust machine base is fabricated from heavy steel tubing, then the entire top is precision ground to a specified flatness.

This unique design provides the ideal foundation for mounting virtually any type of top surface including:

- T Slot Table
- Vacuum Table
- Panel Conveyor
- Custom Plates


Standard machine can travel at over 25 inches per second and is available in the following travels:

- | | |
|--------------------------------|---------|
| ■ 100" x 50" (2500mm x 1250mm) | RD-2500 |
| ■ 50" x 100" (1250mm x 2500mm) | RD-1250 |

Be sure to inquire about our limitless customizing capabilities for other sizes and special tooling.

Great for: RTV, 2 part epoxy, hot melt, spraying, etc

*Shown: RD 1250 Robotic Dispensers
with Light Curtain Guarding*

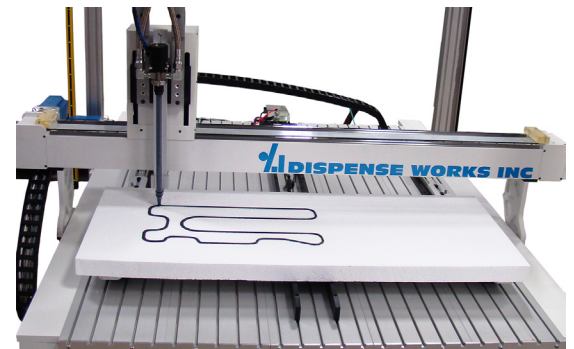

Quality You Can See

Vector tip speed, look-ahead motion technology and real time material pressure/flow monitoring capability results in consistent volumes and bead repeatability.

