

Robotic Dispenser Application 6



Axis 300 system with Pick & Place UV

Gripper removes lens, dispenses UV glue, assembles and spot cures lens to housing.



RG 7236 with 5 Heads and Cart Docking

Dispensing 2 part epoxy, RTV, Laser inspection and serializing ID marking.



Axis 300 with Custom Rotating Nests

Fills ink / epoxies into decorative castings. Quick release changeover fixtures with locks.




RP 2424 with Pro Pallet Fixturing System

A great solution for quick changeover of pallets for different products.




RG with 2 Part Epoxy System

Gantry system with changeover pallets for step & repeat production. Also accommodates conveyors.

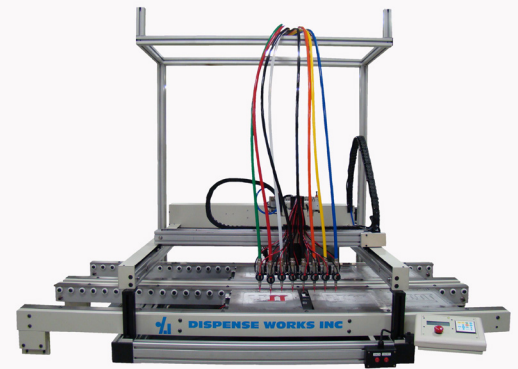

MG 2420 with 8 Heads & Dual Conveyors

Ideal for multi-color filling operations. Includes conveyor stops, sensors and logic.

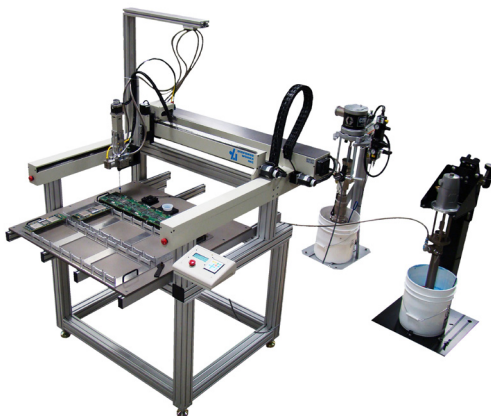

RG 3030 with 2 Part Meter / Mix System

Positive displacement head programmable patterns and shot sizes with servo systems.



RingDex 18 Filling, Tipping and Capping

Semi-Auto rotary dial with change over ring for bottles, vials and ampules.



RP 2415 with Vision & Chip Placement

Adhesive application with vision and pick & place with force sensing and recording.