



Advanced Fill Generator!

Choose from serpentine, line, or other fill patterns to automatically create a motion path for potting, damming, filling, spraying, etc.




Bright LCD Display

Shows real time machine status and includes batch counter, cycle timer, % of completion & hundreds of other functions.

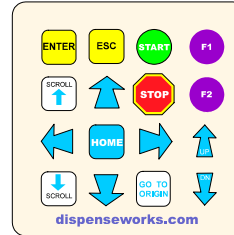

Simple Operator Touchpad

The 16 key touchpad provides the intuitive operator interface along with one touch functions for easy operation and file management.

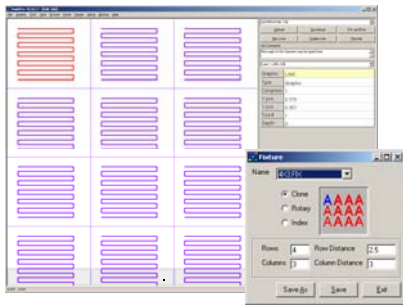


Dozens of Enhanced Functions!

Cloning is one of the many time saving and machine streamlining features that are included in the Dispense Works control package.

Embedded Control System

With built-in **digital valve controller**. No external PC is required for setup or operation. No expensive handhelds to damage or fussy pendant devices to loose or break either.

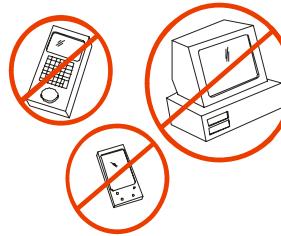


View Edit and Simulate!

Create and import the path in your CAD or graphics software. Supports DXF PLT or G-Code files. Includes optimizing to minimize random motion and full path editing capability.

Unlimited Program Size and Storage

The included Compact Flash Card stores all job files, setup parameters etc. File size and storage is limited only by it's capacity. No processor or memory limitations to number of lines.

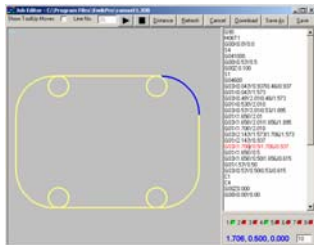


Displays Jog & Teach Path!

If a PC is connected, the Jog & Teach routine "draws" the path on the screen in real time during the process. This becomes a legitimate path file which may be saved and edited.

Your Part Stays Stationary

Unlike lesser systems, only the dispense valve moves from overhead. Your product and tooling remain fixed.

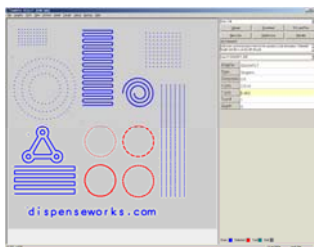


Includes Preset Dots, Fills etc!

Combine several path files onto the master screen with full control of order and properties. Import CAD files or use the on-board pattern generator to create dots, lines, serpentine fills, etc.

Quick Release Removable Base Plate


Ideal for dispensing on trays, pallets or conveyorized applications. No mechanics or electronics are located under the base. This eliminates potential damage due to spills. Furthermore, this design provides obvious limitless customizing capability.

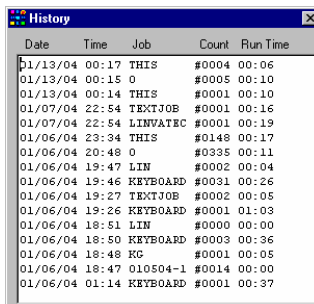

Detailed History Function!

A convenient history function displays detailed production information at the touch of a button.

It Can't Be Any Simpler!

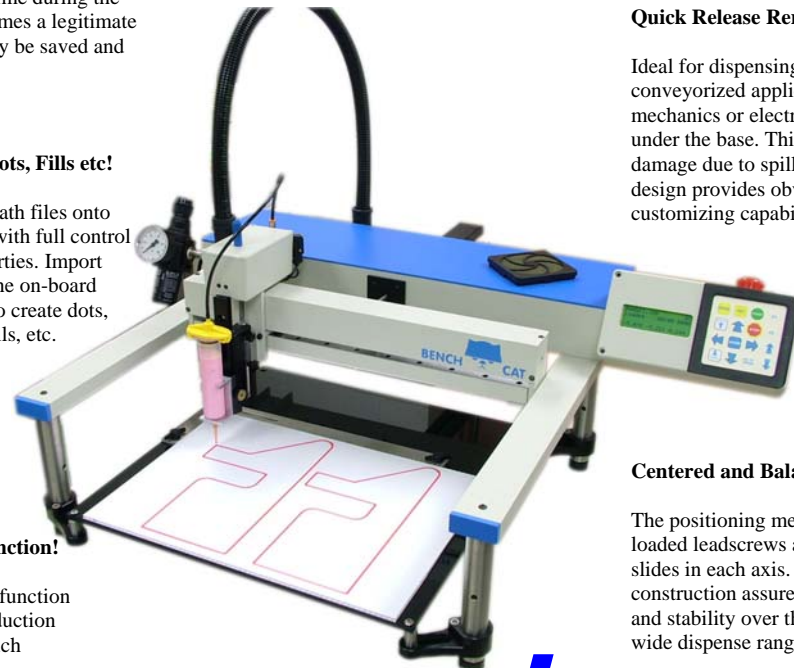

Centered and Balanced Design

The positioning mechanism boasts pre-loaded leadscrews and precision ball slides in each axis. The clever H-Frame construction assures consistent support and stability over the entire 14" wide dispense range.



Made In USA



Dispense Works Inc
www.dispenseworks.com
 815 363 3524

The BENCH CAT may be the perfect solution to automate your dispensing applications. The "Just Right" blend of accuracy and performance will save you time, money and material costs!